

FIG. 1

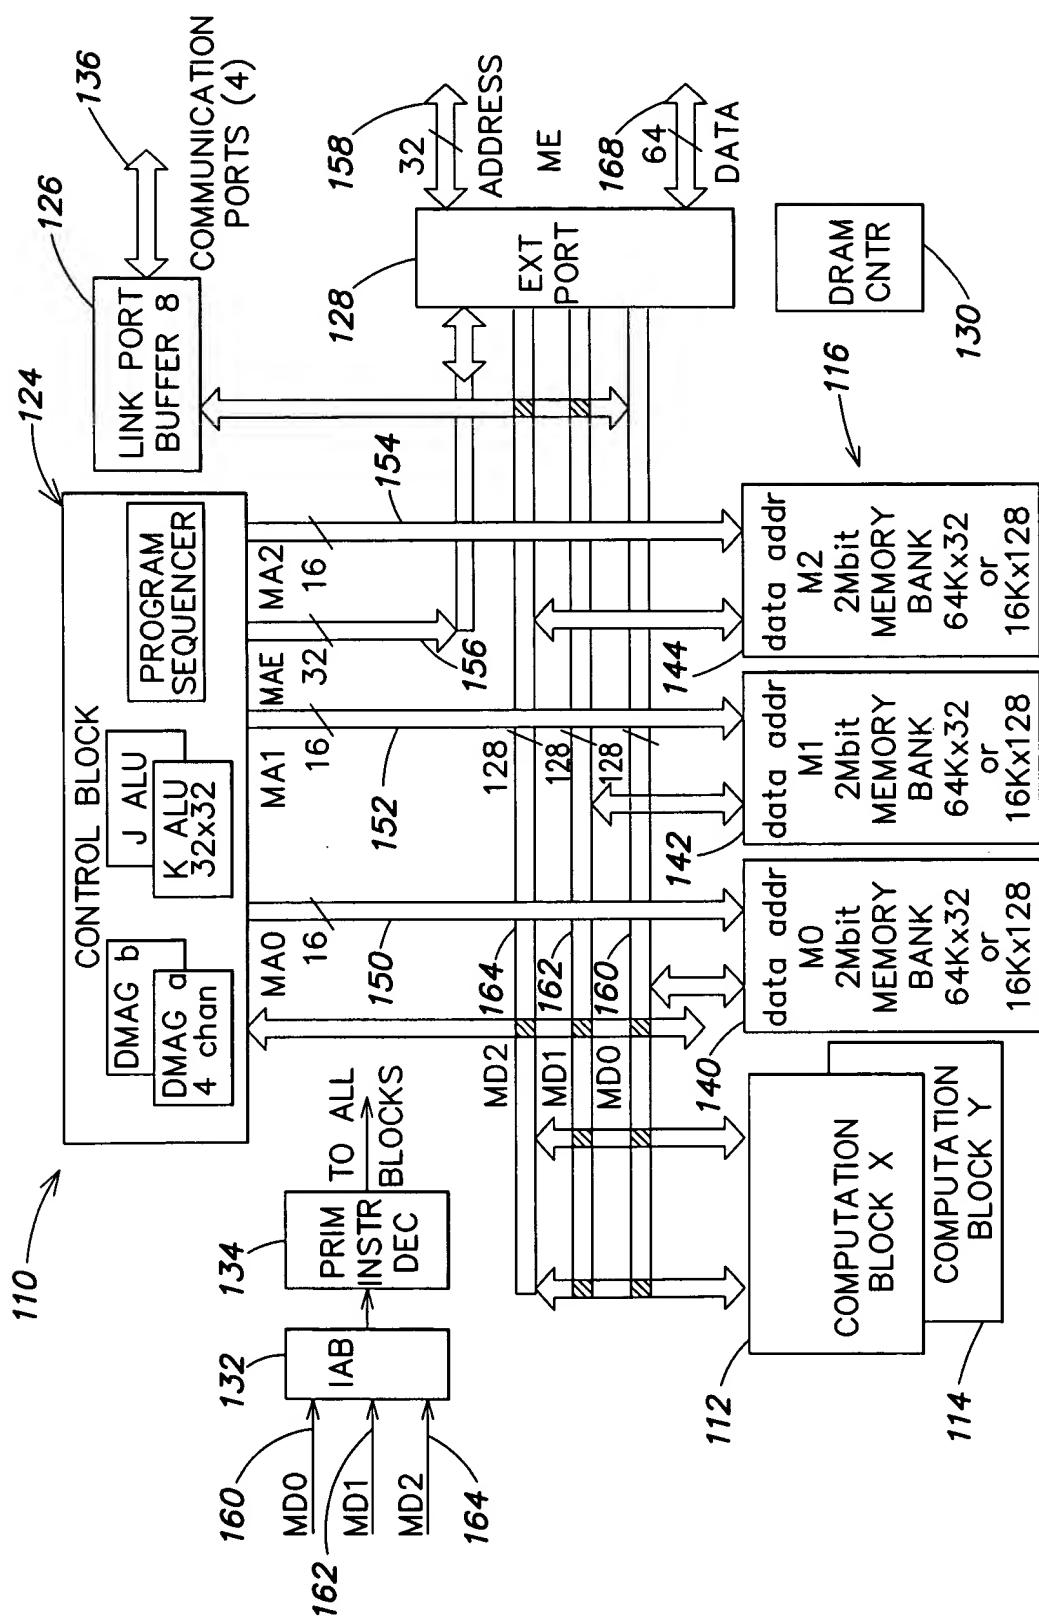


FIG. 2

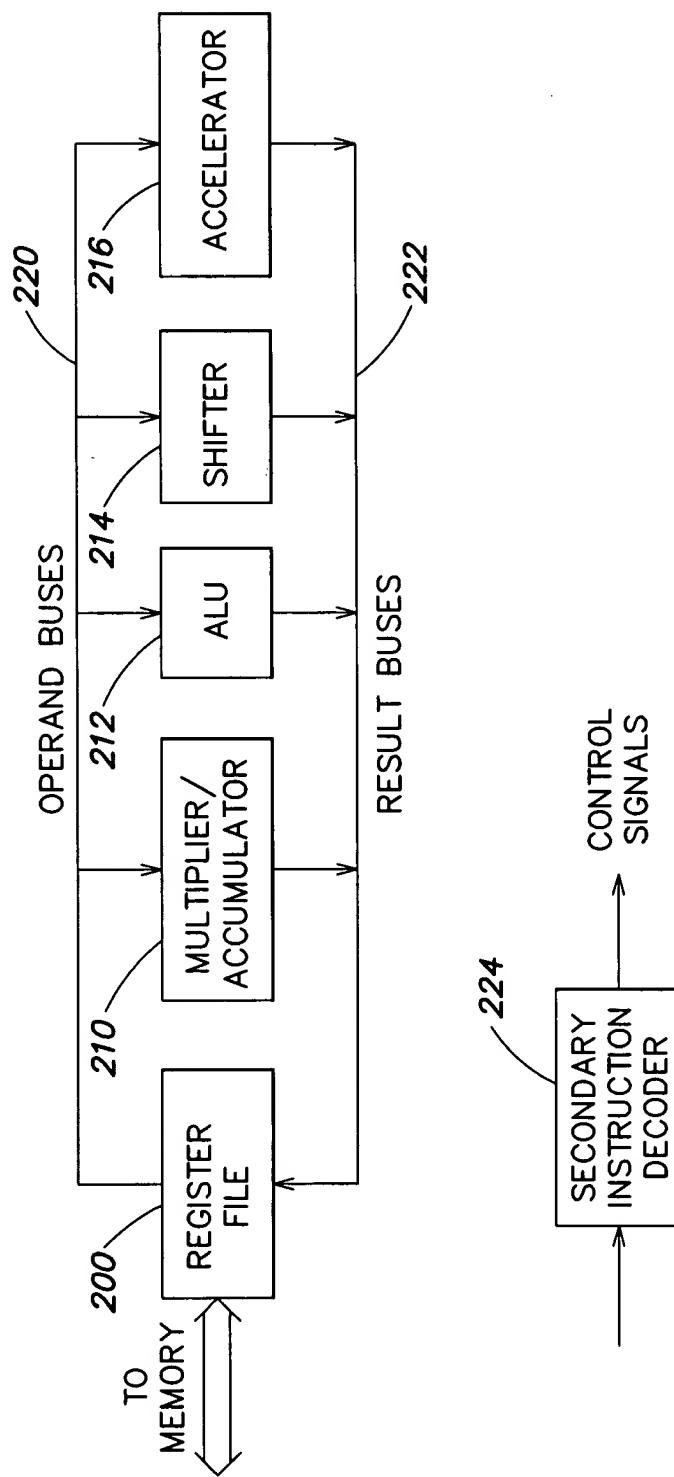


FIG. 3

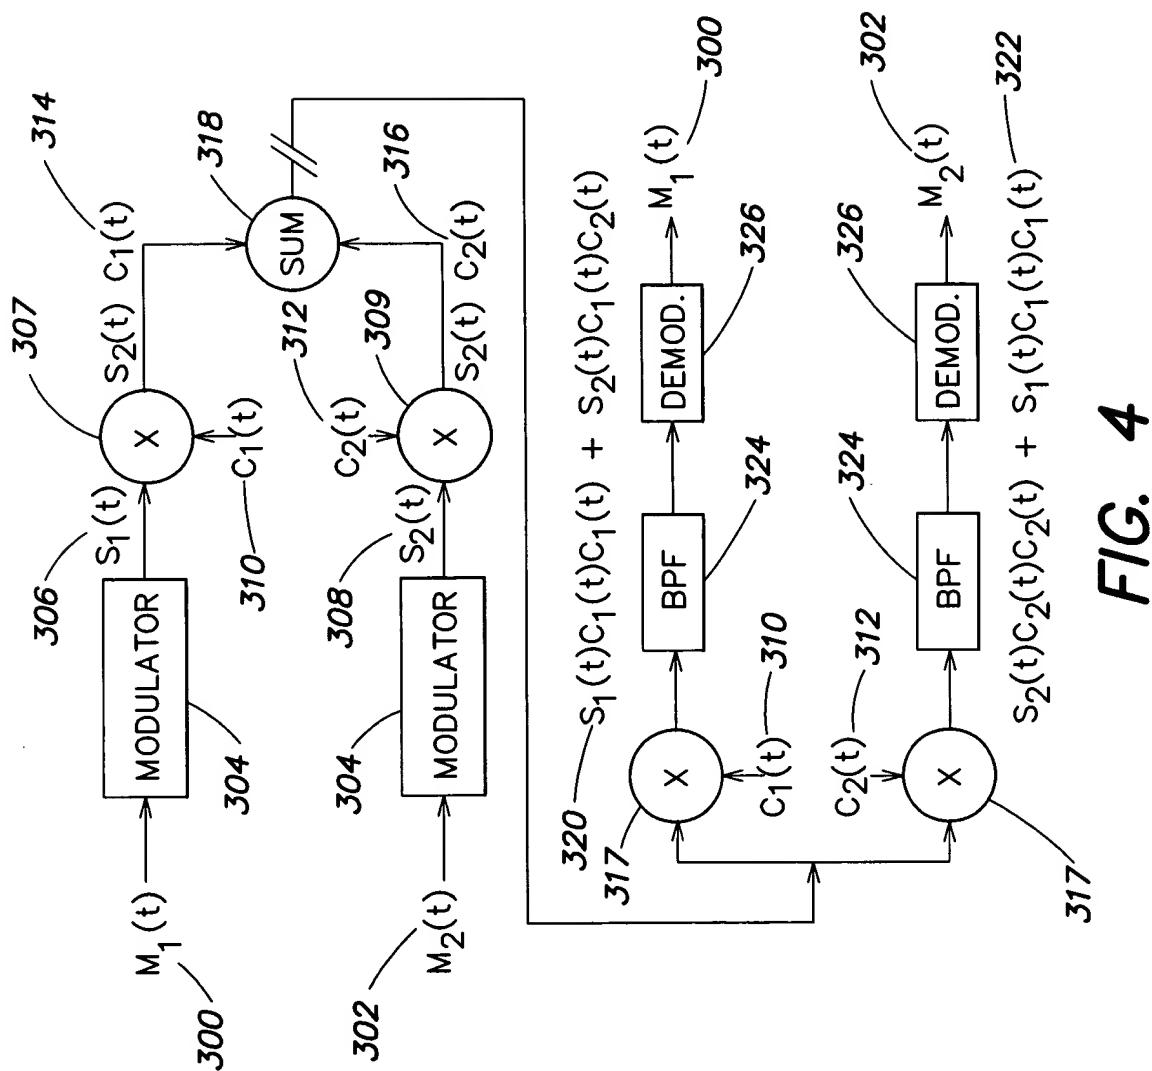


FIG. 4

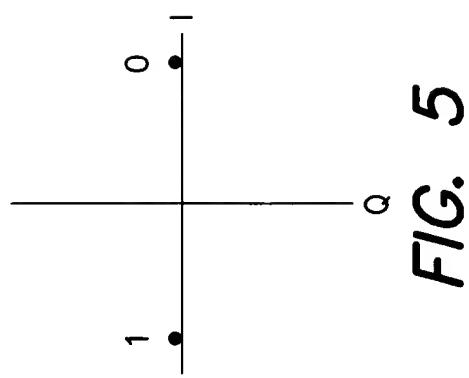


FIG. 5

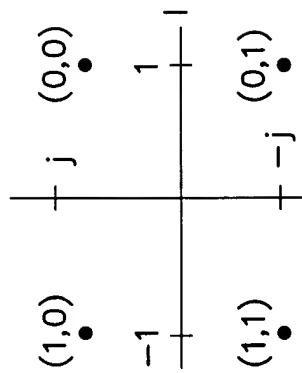


FIG. 6

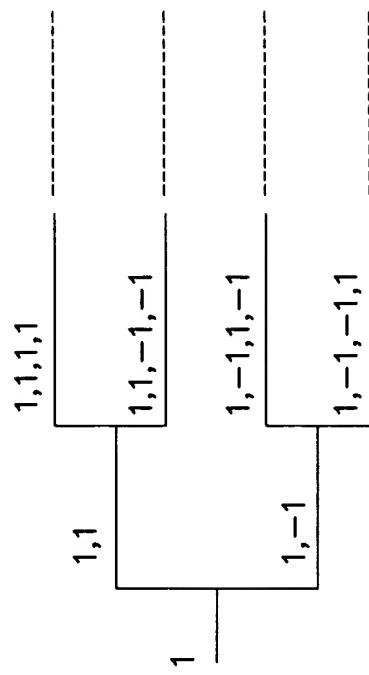


FIG. 7

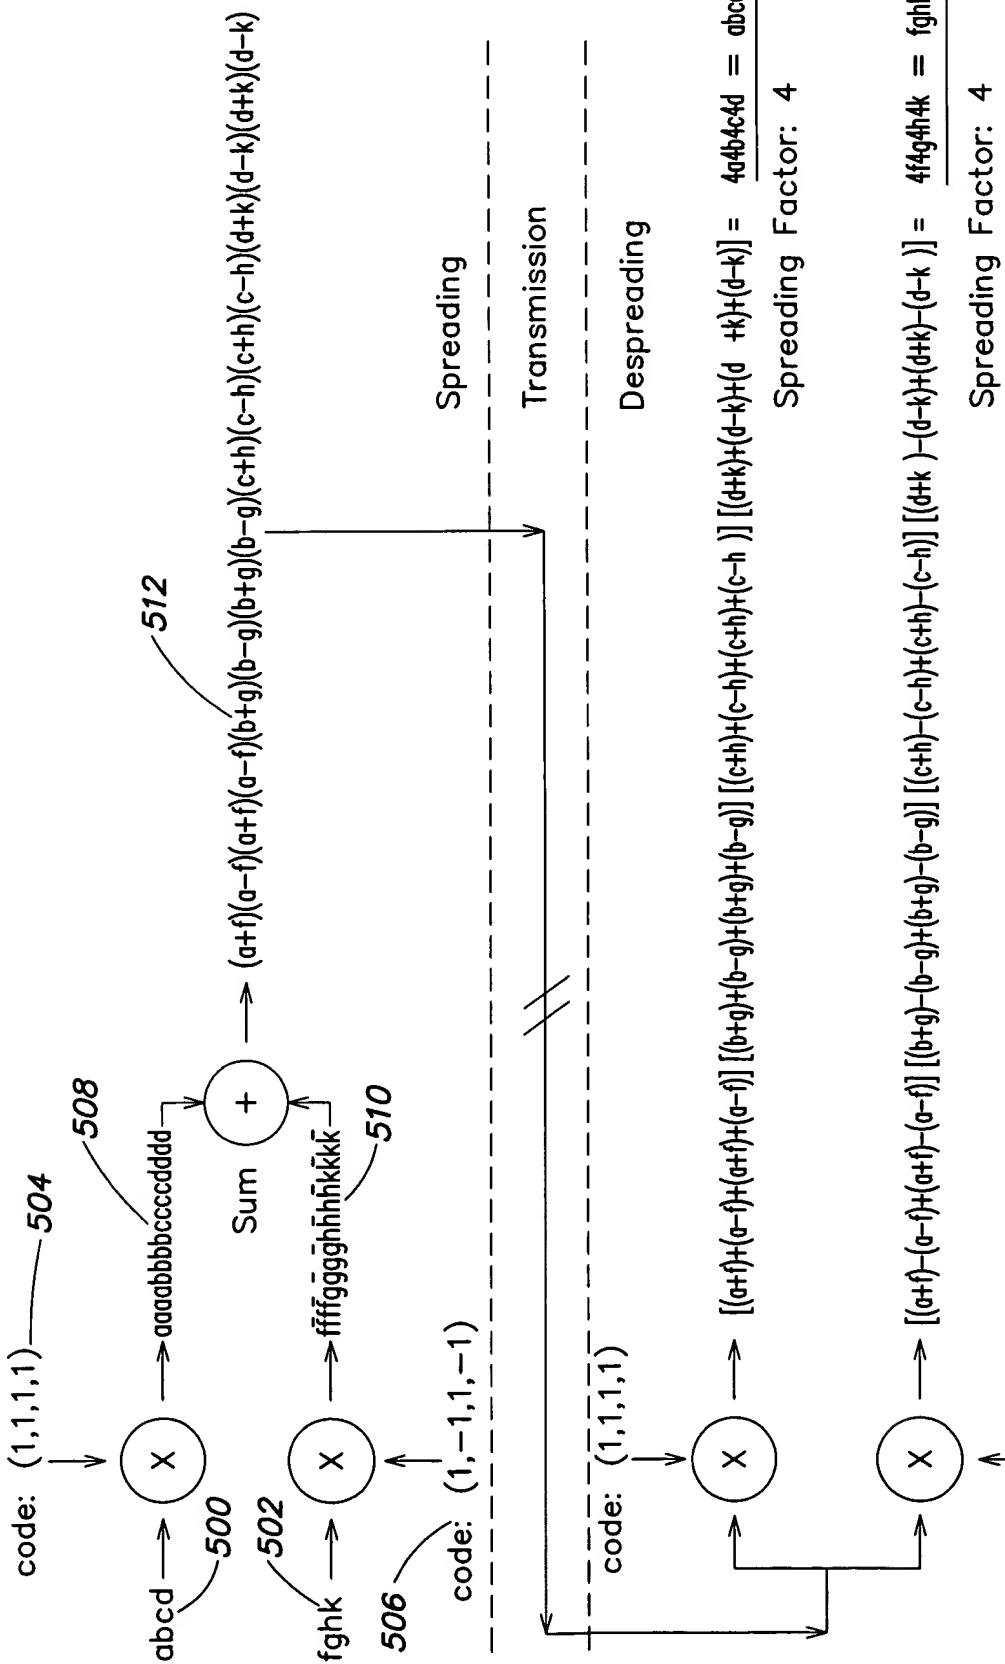


FIG. 8

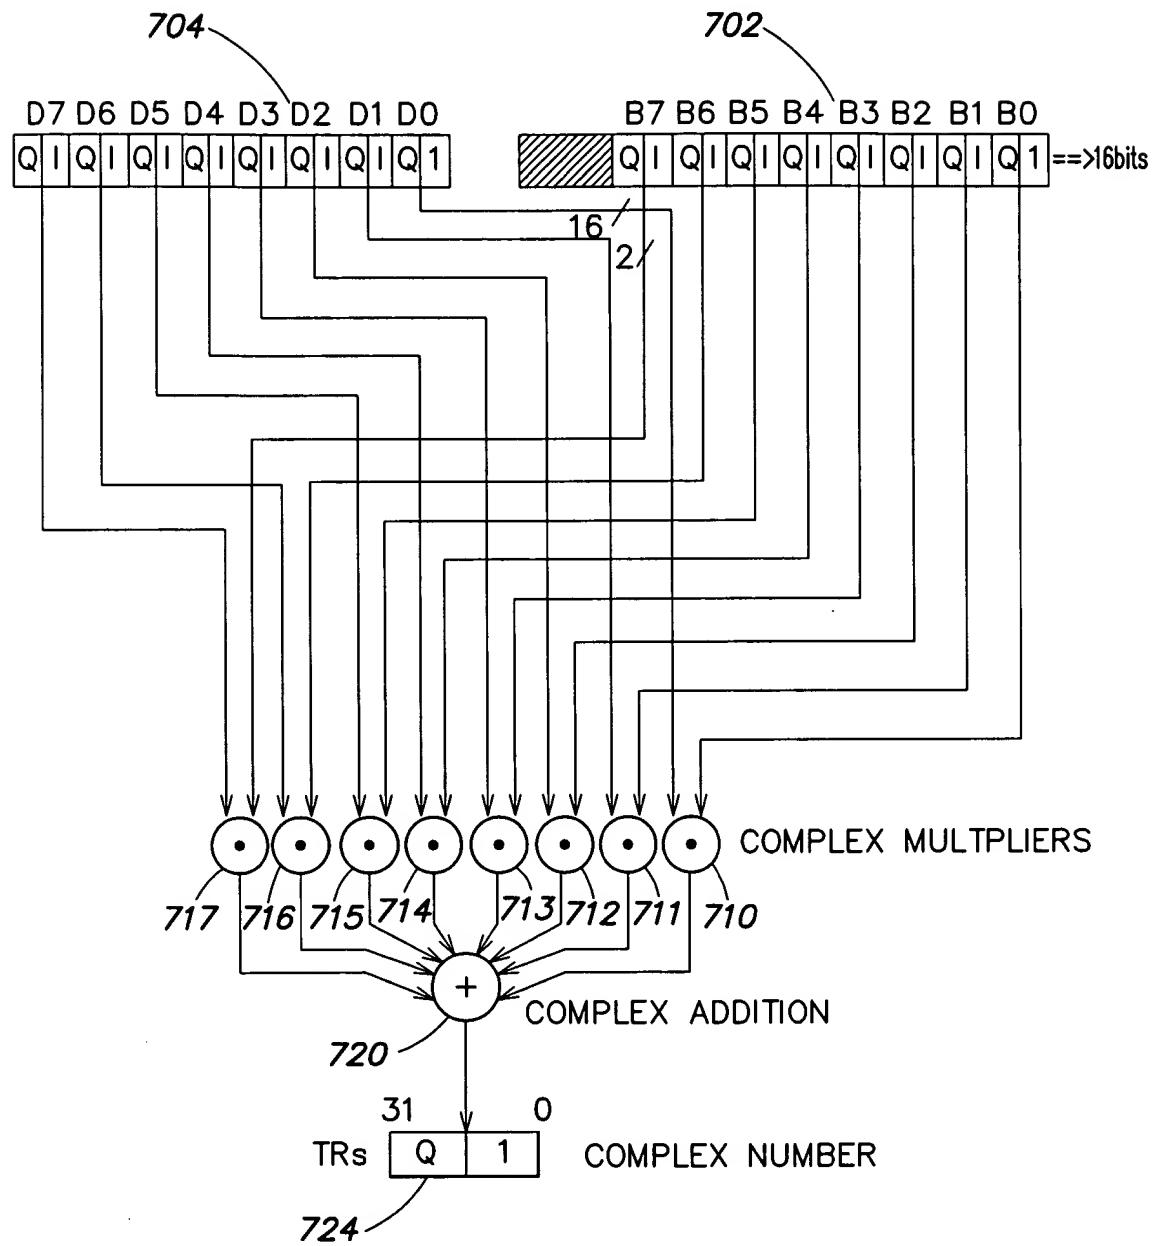


FIG. 9

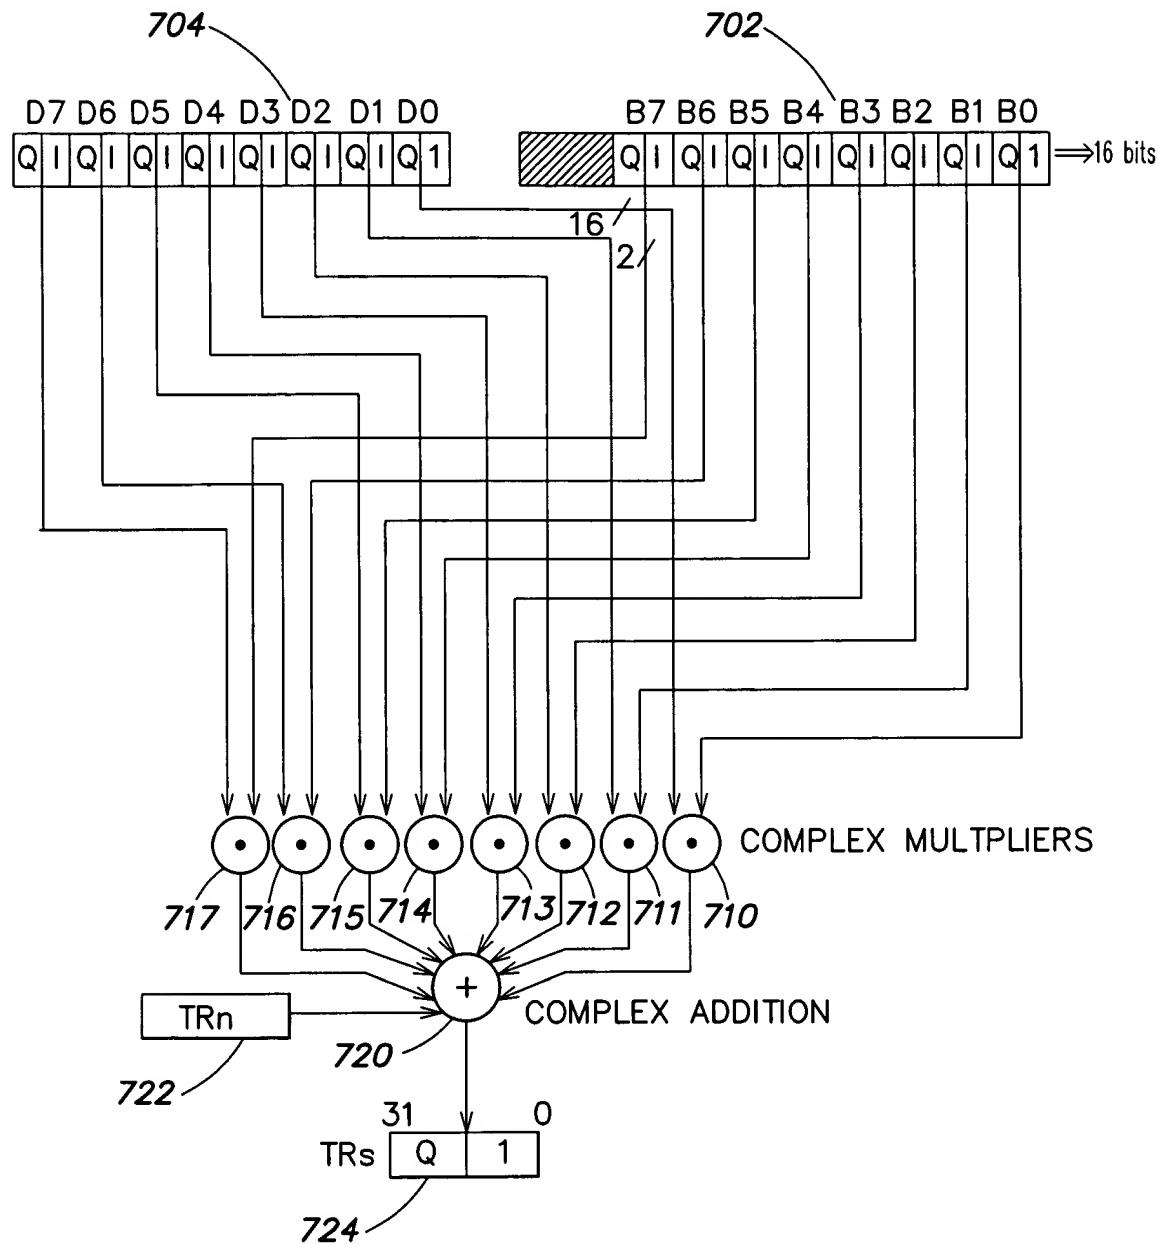


FIG. 10

602
TR0 = DESPREAD (R3:0, THR1:0) ; xR3:0 = SDAB Q[J0+=8];;
604
xTR0 = DESPREAD (R7:4, THR1:0) + TR0; xR7:4 = SDAB Q[J0+=8];;
606
xTR0 = DESPREAD (R3:0, THR1:0) + TR0; xR3:0 = SDAB Q[J0+=8];;
608
xTR0 = DESPREAD (R7:4, THR1:0) + TR0; xR7:4 = SDAB Q[J0+=8];;
610
xTHR1:0 = R19:18 (I);;

FIG. 11

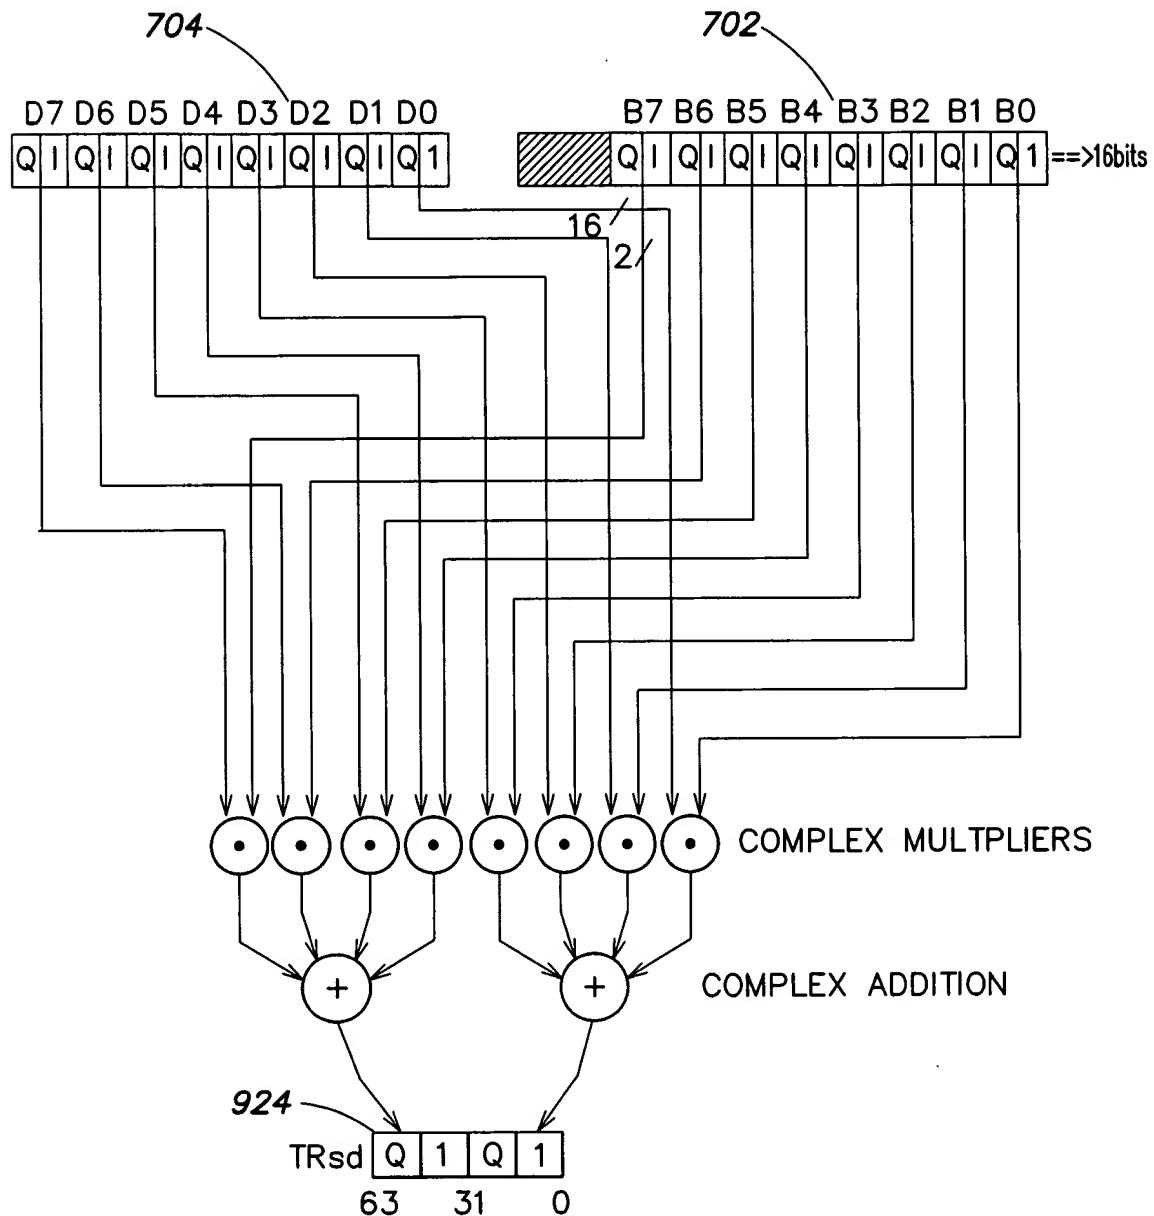


FIG. 12